

Door Care And General Maintenance

4Ddoors

GARAGE DOORS REDEFINED

HORMANN

HORMANN

4Ddoors

GARAGE DOORS REDEFINED

How do I clean my door?

Clean water is sufficient for cleaning and care. Use warm water together with SONAX Gloss Wash Shampoo if more heavily soiled.

Please note that not all Hörmann Doors have the same care instructions. Please read applicable surfaces for each care guide item.

How often should I clean my door?

The entire door should be cleaned at least once every 3 months.

A wide range of environmental influences (e.g. ocean climate, acids, road salt and extreme air pollution) can shorten the intervals between each cleaning.

The track area (highlighted in the image to the left) between the sections and frame should be kept clean and free of dust at all times, otherwise the door colour may be damaged at the edges.

We also recommend treating and maintaining the door surface with a commercial car polish to provide the paint with long-term protection.

We recommend polish + wax 2 from Sonax.

Use on Surface Finishes: Woodgrain, Silkgrain, Decograin, DecoPaint & Duragrain.

How do I get rid of stubborn dirt?

Stubborn dirt can be removed using a standard commercial car polish.

We recommend polish + wax 2 from Sonax.

Use on Surface Finishes: Woodgrain, Silkgrain, Decograin, DecoPaint & Duragrain.

SANDGRAIN FINISH CLEANING AND CARE!

4Ddoors recommends only cleaning Sandgrain finish doors with water and a clean cloth. DO NOT USE Polishing products or tools on a Sandgrain finish door.

ATTENTION!

Do not use with a polishing machine!

Always follow the directions provided by the manufacturer.
Please note that not all Hörmann Doors have the same care instructions.
Please read applicable surfaces for each care guide item.





1. Wash with SONAX Gloss Shampoo, SONAX Multisponge and SONAX Microfibre Cloth.



SONAX GLOSS WASH SHAMPOO

The dirt dissolving solution penetrates thoroughly without attacking the protective coating.

- Leaves a high gloss!
- High concentrate shampoo formula that quickly penetrates & dissolves dirt.
- Cleans all paint, rubber, plastic, vinyl & glass surface.
- Suitable for all paintwork surfaces.
- Its mild surface-active agent preserves the protective wax layer.
- Phosphate-free & pH neutral.

Dilute 2 caps in 10L of warm water. Wash door from top to bottom.



SONAX LARGE WASH MULTI SPONGE

Large all-rounder sponge for door washing.

- Designed to be extra absorbent.
- The ergonomic shape makes the grip easier during cleaning.
- The grey side has a softer structure and is made for general vehicle cleaning.
- The white side has a rougher surface and is ideal for removing stubborn dirt e.g.



SONAX ULTRA-FINE MICROFIBRE CLOTH FOR INTERIOR & GLASS

Ultra-fine microfibre cloth for use on interior surfaces and glass.

- Cleans glass, mirrors, plastic surfaces and upholstery.
- No streaks, smears or fluff.
- Washable up to 60° C. Do not use fabric softener



Always follow the directions provided by the manufacturer.
Please note that not all Hörmann Doors have the same care instructions.
Please read applicable surfaces for each care guide item.

ATTENTION!

Do not use with a polishing machine!



2. Hand polishing with SONAX Xtreme Polish + Wax 2, SONAX Applicator and SONAX Microfibre Cloth.



SONAX XTREME POLISH + WAX 2

A gentle polish and wax combo for slightly worn, newer paintwork.

- Gentle with mild abrasives that break down into extremely fine particles during polishing.
- Fine scratches are evened out and dull haze is removed.
- It provides mirror shine and long-lasting protection.
- No strenuous polishing required!
- Easy residue wipe-off.
- When accidentally applied to plastic parts, no white stains or streaks happen!

Apply Xtreme Polish + Wax 2 to clean and dry door panel and spread evenly. Polish immediately with medium pressure and treat complete sections in one go. Allow to dry briefly and remove all polish residue with SONAX microfibre cloth. Do not use polishing machine!



SONAX APPLICATION SPONGE

Special yellow fine sponge with a reinforced white grip side for easy handling.

- Yellow sponge side with extra fine pores for the special application of polishes and waxes. (less product goes into the fine pores)
- Extremely versatile sponge for exterior application of polishes and waxes.



SONAX ULTRA-FINE MICROFIBRE CLOTH FOR INTERIOR & GLASS

Ultra-fine microfibre cloth for use on interior surfaces and glass.

- Cleans glass, mirrors, plastic surfaces and upholstery.
- No streaks, smears or fluff.
- Washable up to 60° C. Do not use fabric softener



Always follow the directions provided by the manufacturer.
Please note that not all Hörmann Doors have the same care instructions.
Please read applicable surfaces for each care guide item.

ATTENTION!

Do not use with a polishing machine!



3. Clean fingerprints, clean the inside with SONAX Interieur Cleaner and SONAX Microfibre Cloth.



SONAX XTREME INTERIOR CLEANER, HYGIENIC ODOUR ELIMINATOR

Car Interior cleaner for hygienic cleanliness in the car and household.

- Removes stubborn dirt from roof lining, upholstery seats, and trims.
- Odour eliminator neutralizes odours such as smoke, animal and other unpleasant smells.
- Works a treat in the home as well.



SONAX ULTRA-FINE MICROFIBRE CLOTH FOR INTERIOR & GLASS

Ultra-fine microfibre cloth for use on interior surfaces and glass.

- Cleans glass, mirrors, plastic surfaces and upholstery.
- No streaks, smears or fluff.
- Washable up to 60° C. Do not use fabric softener



Always follow the directions provided by the manufacturer.
Please note that not all Hörmann Doors have the same care instructions.
Please read applicable surfaces for each care guide item.

ATTENTION!

Do not use with a polishing machine!



Always follow the directions provided by the manufacturer.
Please note that not all Hörmann Doors have the same care instructions.
Please read applicable surfaces for each care guide item.

How do I clean glazings?

First, rinse off any dirt and dust particles with water. If necessary, then wipe down with water, pH-neutral household detergent and a soft, clean cloth.

If the panels are foggy after many years of use, the only option is to exchange the glazing.



SONAX CLEAR GLASS CLEANER

Removal of insects and road dirt from windscreens, windows and headlamps.

- Automotive-grade glass cleaner.
- Streak-Free vision.
- Works Instantly frees windscreens and headlights from insects, dirt and exhaust deposits.
- Nicotine deposits & smear film eradicated quickly & easily from interior windscreens & mirrors.
- Phosphate Free & Ammonia Free - safe for tinted windows.

How do I clean rubber seals?

Maintains unpainted plastic components.



SONAX XTREME PLASTIC RESTORER GEL EXTERIOR

Cleaning, maintaining, and restoring of rubber parts of the garage door.

- Long term protection, microscopic particles, deeply penetrate ingrained and structured surfaces.
- Long-lasting conservation.
- Freshens up colours and produces rich deep shine, on treated surface, also ideal for rubber components.
- Recommended use, twice a year.

ATTENTION!

Do not use with a polishing machine!



Sectional & Roller Garage Doors



Residential Doors



Collective Garage Doors



Industrial Doors



Openers



High Speed Doors



Loading Technology



Rolling Shutters & Grilles

4Ddoors

GARAGE DOORS REDEFINED

www.4Ddoors.com

Doors finished in dark colours can experience deflection when exposed to excessive heat.

4Ddoors reserve the right to make changes to the products and accessories without notice and without obligation to change existing products or orders.

Details are correct at time of printing. For more details on this product or others in our range including warranty details and conditions, please visit the website www.4ddoors.com.au

©2014 4D Garage Doors Pty Ltd. All rights reserved. The 4Ddoor logos, "FOR HOME AND INDUSTRY." wordage, are trademarks and registered trademarks of 4D Garage Doors Pty Ltd. No part of this guide may be reproduced without prior permission.